

WK2 - JACKING AND HOISTING LIFT POINTS

Refer to Owner's Manual provided with vehicle for proper emergency jacking procedures.

 
WARNING: The hoisting and jack lifting points provided are for a complete vehicle. When the engine or rear suspension is removed from a vehicle, the center of gravity is altered making some hoisting conditions unstable. Properly support or secure vehicle to hoisting device when these conditions exist. Failure to follow these instructions may result in personal injury or death.

When properly positioned, a floor jack can be used to lift the vehicle and support the raised vehicle with jack stands.

A floor jack or any lifting device, must never be used on any part of the underside other than the described areas.

CAUTION: Do not attempt to lift a vehicle with a floor jack positioned under:

- Aluminum differential.
- A body side sill.
- A steering linkage component.
- A drive shaft.
- The engine or transmission oil pan.
- The fuel tank.

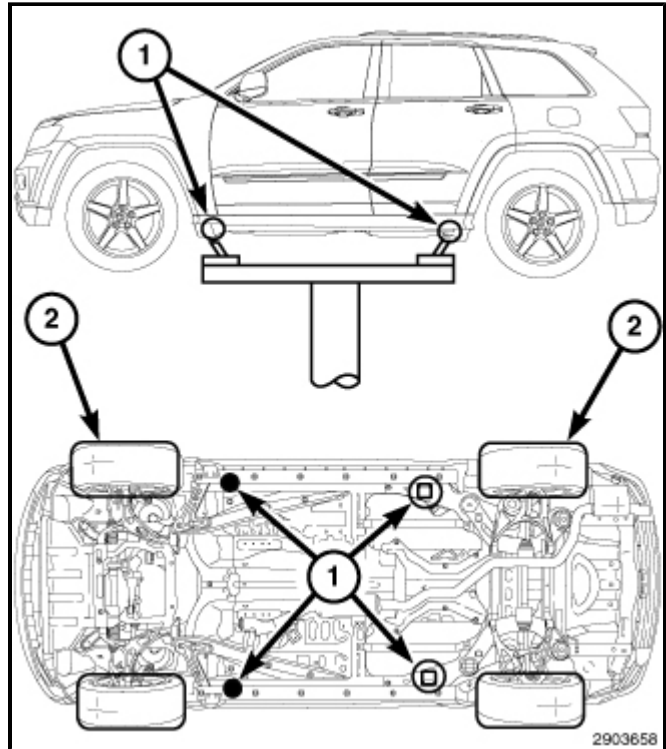

- 1 - FLOOR JACK, VEHICLE EMERGENCY JACK
- 1 - CHASSIS LIFT (DUAL POST)
- 1 - OUTBOARD LIFT (DUAL LIFT)
- 2 - DRIVE ON HOIST