

and replace if necessary.														
Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.		X		X		X		X		X		X		X
Inspect the brake linings, parking brake function.		X		X		X		X		X		X		X
Inspect transfer case fluid.			X		X		X		X		X		X	X
Additional Maintenance														
Replace fuel filter and drain water from Water In Fuel Drain			X		X		X		X		X		X	X
Replace engine air filter.			X		X		X		X		X		X	X
Replace air conditioning filter.		X		X		X		X		X		X		X
Flush and replace the engine coolant at 10 years or 150,000 miles (240,000 km) whichever comes first.									X					X
Change transfer case fluid.											X			