

2013-2014 WK - Vehicle Quick Reference/Maintenance Schedules/Description

MAINTENANCE SCHEDULES - CHINA DIESEL

To help you have the best driving experience possible, the manufacturer has identified the specific vehicle maintenance service intervals that are required to keep your vehicle operating properly and safely.

The manufacturer recommends that these maintenance intervals be performed at your selling dealer. The technicians at your dealership know your vehicle best, and have access to factory trained information, genuine MOPAR® parts, and specially designed electronic and mechanical tools that can help prevent future costly repairs.

The maintenance intervals shown should be performed as indicated in this section.

- NOTE:**
- Under no circumstances should oil change intervals exceed 20 000 km or 12 months, whichever comes first.
 - Flush and replace the engine coolant at 120 months or 240 000 km whichever comes first.

At Each Stop for Fuel

- Check the engine oil level about 15 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

Once a Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and add as needed.
- Check all lights and other electrical items for correct operation.

At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.
- Inspect for the presence of water in the fuel filter/water separator unit.

- CAUTION:**
- Failure to perform the required maintenance items may result in damage to the vehicle.
 - Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.

OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The "Oil Change Required" message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the "ON" position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the "LOCK" position.

NOTE: If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.

Required Maintenance Intervals

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
6200	10000	6	<ul style="list-style-type: none"> ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.
12000	20000	12	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Replace the air conditioning filter. ■ Inspect the brake linings, replace if necessary. ■ Inspect exhaust system. ■ Inspect the CV joints.
18600	30000	18	<ul style="list-style-type: none"> ■ Rotate tires. Change the engine oil and engine oil filter. ■ Replace the engine air cleaner filter. ■ Inspect the front and rear axle fluid. Change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.
24500	40000	24	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Replace the air conditioning filter. ■ Replace the fuel filter. ■ Inspect the front suspension, tie rod ends and boot seals, replace if necessary. ■ Inspect the brake linings, replace if necessary. ■ Inspect exhaust system.

			<ul style="list-style-type: none"> ■ Inspect the CV joints. ■ Inspect the transfer case fluid level, or change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing. ■ Adjust parking brake on vehicles equipped with four-wheel disc brakes. ■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.
31000	50000	30	<ul style="list-style-type: none"> ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.
37000	60000	36	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ Replace the engine air cleaner filter. ■ Replace the air conditioning filter. ■ Inspect the brake linings, replace if necessary.
43500	70000	42	<ul style="list-style-type: none"> ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Inspect the CV joints.
50000	80000	48	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Replace the air conditioning filter. ■ Replace the fuel filter. ■ Inspect the front suspension, tie rod ends and boot seals, replace if necessary. ■ Inspect the brake linings, replace if necessary. ■ Inspect exhaust system. ■ Adjust parking brake on vehicles equipped with four-wheel disc brakes. ■ Inspect the brake linings, replace if necessary.
56000	90000	54	<ul style="list-style-type: none"> ■ Rotate tires. ■ Replace the engine air cleaner filter. ■ Inspect the CV joints. ■ Change the Transfer Case Fluid. ■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.
62000	100000	60	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Replace the air conditioning filter. ■ Inspect the brake linings, replace if necessary.
68000	110000	66	<ul style="list-style-type: none"> ■ Rotate tires.

			<ul style="list-style-type: none"> ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.
75000	120000	72	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ Replace the engine air cleaner filter. ■ Replace the air conditioning filter. ■ Replace the fuel filter. ■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary. ■ Inspect the brake linings, replace if necessary. ■ Inspect exhaust system. ■ Inspect the CV joints. ■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.
81000	130000	78	<ul style="list-style-type: none"> ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.
87000	140000	84	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Replace the air conditioning filter. ■ Inspect the brake linings, replace if necessary. ■ Inspect the CV joints. ■ Inspect the transfer case fluid level, or change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing. ■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.
93000	150000	90	<ul style="list-style-type: none"> ■ Rotate tires. ■ Replace the engine air filter cleaner.
100000	160000	96	<ul style="list-style-type: none"> ■ Change the engine oil and engine oil filter. ■ Rotate tires. ■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary. ■ Replace the air conditioning filter. ■ Replace the fuel filter. ■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary. ■ Inspect the brake linings, replace if necessary. ■ Inspect exhaust system. ■ Inspect the CV joints. ■ Replace the accessory drive belt(s). ■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.

WARNING:

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt

- about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident

Failure to follow these instructions may result in possible serious or fatal injury.