

# 2011 WK MAINTENANCE SCHEDULES - EUROPE

## Maintenance Schedule – Gasoline Engine

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles “Oil Change Required” will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

The oil change indicator message will illuminate approximately 7,000 miles (11 200 km) after the most recent oil change was performed. Have your vehicle serviced as soon as possible, within 500 miles (800 km).

- NOTE:**
- The oil change indicator message will not monitor the time since the last oil change. Change your vehicles oil if it has been 6 months since your last oil change even if the oil change indicator message is NOT illuminated.
  - Change your engine oil more often if you drive your vehicle off-road for an extended period of time.
  - Under no circumstances should oil change intervals exceed 7,500 miles (12 000 km) or 6 months, whichever comes first.

## OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The “Oil Change Required” message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the “ON” position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the “LOCK” position.

**NOTE:** If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.

## At Each Stop for Fuel

- Check the engine oil level about 5 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

## Once a Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.

- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and transmission (4.7L and 5.7L only) and add as needed.
- Check all lights and other electrical items for correct operation.

## At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

### CAUTION:

- Failure to perform the required maintenance items may result in damage to the vehicle.
- Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.

## Required Maintenance Intervals

### Severe Duty Conditions

†† Change the engine oil and engine oil filter at every 3,000 miles (5 000 km) or 3 months if using your vehicle under any of the following severe duty conditions:

- Stop and go driving.
- Driving in dusty conditions.
- Short trips of less than 10 miles (16 km).
- Trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
7500	12000	6	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
15000	24000	12	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul>
22500	36000	18	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>

			<ul style="list-style-type: none"> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
30000	48000	24	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the transfer case fluid.</li> </ul>
37500	60000	30	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
45000	72000	36	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
52500	84000	42	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
60000	96000	48	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Change the automatic transmission fluid and filter(s) if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</li> <li>■ Change the transfer case fluid if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</li> </ul>
67500	108000	54	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>

			<ul style="list-style-type: none"> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
75000	120000	60	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Flush and replace the engine coolant if not done at 105,000 miles (168 000 km).</li> </ul>
82500	132000	66	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
90000	144000	72	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (3.6L and 5.7L Engine).</b></li> <li>■ <b>Inspect and replace PCV valve if necessary. †</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> <li>■ Inspect the transfer case fluid.</li> </ul>
97500	156000	78	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
105000	168000	84	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Flush and replace the engine coolant if not done at 60 months.</li> </ul>
112500	180000	90	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> </ul>

			<ul style="list-style-type: none"> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
120000	192000	96	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Change the automatic transmission fluid and filter(s).</li> <li>■ Change the transfer case fluid.</li> <li>■ Replace the accessory drive belt(s).</li> </ul>
127500	204000	102	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
135000	216000	108	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
142500	228000	114	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
150000	240000	120	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the transfer case fluid.</li> </ul>

† This maintenance is recommended by the manufacturer to the owner, but is not required to maintain emissions warranty.

**WARNING:**

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent

- mechanic.
- **Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident**

**Failure to follow these instructions may result in possible serious or fatal injury.**

## **Maintenance Schedule – Diesel Engine**

To help you have the best driving experience possible, the manufacturer has identified the specific vehicle maintenance service intervals that are required to keep your vehicle operating properly and safely.

The manufacturer recommends that these maintenance intervals be performed at your selling dealer. The technicians at your dealership know your vehicle best, and have access to factory trained information, genuine MOPAR® parts, and specially designed electronic and mechanical tools that can help prevent future costly repairs.

The maintenance intervals shown should be performed as indicated in this section.

**NOTE:** Under no circumstances should oil change intervals exceed 12,500 miles (20 000 km) or 12 months, whichever comes first.

### **At Each Stop for Fuel**

- Check the engine oil level about 15 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

### **Once a Month**

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, and power steering and add as needed.
- Check all lights and other electrical items for correct operation.

### **At Each Oil Change**

- Change the engine oil filter.
- Inspect the brake hoses and lines.
- Inspect for the presence of water in the fuel filter/water separator unit.

**CAUTION:**

- **Failure to perform the required maintenance items may result in damage to the vehicle.**
- **Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.**

Refer to the Maintenance Schedules on the following pages for the required maintenance intervals.



Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
6250	10000	6	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> </ul>
12500	20000	12	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect exhaust system. Perform the first inspection at 12,500 miles (20 000 km) or 12 months.</li> <li>■ Inspect the CV joints. Perform the first inspection at 12,500 miles (20 000 km) or 12 months.</li> </ul>
18750	30000	18	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ Replace engine air cleaner filter.</li> <li>■ Inspect the front and rear axle fluid. Change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing.</li> </ul>
25000	40000	24	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Replace the fuel filter/water separator unit.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals, replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect the transfer case fluid.</li> <li>■ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.</li> </ul>
31250	50000	30	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> </ul>
37500	60000	36	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ Replace engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid. Change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing.</li> </ul>

43750	70000	42	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> </ul>
50000	80000	48	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Replace the fuel filter/water separator unit.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals, replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect the transfer case fluid.</li> <li>■ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.</li> </ul>
56250	90000	54	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ Replace engine air cleaner filter.</li> <li>■ Inspect the front and rear axle fluid. Change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing.</li> </ul>
62500	100000	60	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Change the automatic transmission fluid and filter if using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing.</li> <li>■ Change the transfer case if using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing.</li> </ul>
68750	110000	66	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> </ul>
75000	120000	72	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ Replace engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Replace the fuel filter/water separator unit.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals, replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid. Change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the CV joints.</li> </ul>



			<ul style="list-style-type: none"> <li>■ Inspect the transfer case fluid.</li> <li>■ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.</li> </ul>
81250	130000	78	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> </ul>
87500	140000	84	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> </ul>
93750	150000	90	<ul style="list-style-type: none"> <li>■ Rotate tires.</li> <li>■ Replace engine air cleaner filter.</li> <li>■ Inspect the front and rear axle fluid. Change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing.</li> </ul>
100000	160000	96	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle in dusty or off-road conditions, inspect the engine air cleaner filter, and replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Replace the fuel filter/water separator unit.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals, replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect the transfer case fluid.</li> <li>■ Change the automatic transmission fluid and filter.</li> <li>■ Flush and replace the engine coolant (antifreeze).</li> <li>■ Replace accessory drive belt(s).</li> <li>■ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.</li> </ul>

**WARNING:**

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident

**Failure to follow these instructions may result in possible serious or fatal injury.**