

## 2013-2014 WK - Vehicle Quick Reference/Maintenance Schedules/Description

# MAINTENANCE SCHEDULES - EUROPE/UK GASOLINE

The Scheduled Maintenance services listed in this manual must be done at the times or mileages specified to protect your vehicle warranty and ensure the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions, such as dusty areas and very short trip driving. Inspection and service should also be done anytime a malfunction is suspected.

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles "Oil Change Required" will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

The oil change indicator message will illuminate approximately 7,000 miles (11,200 km) after the most recent oil change was performed. Have your vehicle serviced as soon as possible, within 500 miles (800 km).

- NOTE:**
- **The oil change indicator message will not monitor the time since the last oil change. Change your vehicles oil if it has been 12 months since your last oil change even if the oil change indicator message is NOT illuminated.**
  - **Change your engine oil more often if you drive your vehicle off-road for an extended period of time.**
  - **Under no circumstances should oil change intervals exceed 7,500 miles (12 000 km) or 12 months, whichever comes first.**

### At Each Stop for Fuel

- Check the engine oil level about 5 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

### Once a Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, and power steering and add as needed.
- Check all lights and other electrical items for correct operation.

### At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

- CAUTION:**
- **Failure to perform the required maintenance items may result in damage to the vehicle.**
  - **Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.**

- WARNING:**
- **You can be badly injured working on or around a motor vehicle. Do only service work**

for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.

- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident

Failure to follow these instructions may result in possible serious or fatal injury.

## OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The “Oil Change Required” message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the “ON” position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the “LOCK” position.

**NOTE:** If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.

## Required Maintenance Intervals

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
7500	12000	12	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
15000	24000	24	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> </ul>

22500	36000	36	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.</li> </ul>
30000	48000	48	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Check the transfer case fluid level, change if using your vehicle for police, taxi, fleet, offroad or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.</li> </ul>
37500	60000	60	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
45000	72000	72	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
52500	84000	84	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
60000	96000	96	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Change the Transfer Case Fluid.</li> <li>■ Inspect the CV joints.</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.</li> </ul>
67500	108000	108	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot</li> </ul>

			<p>seals; replace if necessary.</p> <ul style="list-style-type: none"> <li>■ Replace the spark plugs (3.6L and 5.7L Engine).** The spark plug change interval is mileage based only, monthly intervals do not apply.</li> </ul>
75000	120000	120	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Flush and replace the engine coolant at 120 months or 150,000 miles (240,000 km) whichever comes first.</li> </ul>
82500	132000	132	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
90000	144000	144	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Inspect and replace PCV valve if necessary. †</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.</li> <li>■ Check the transfer case fluid or change if using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
97500	156000	156	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
105000	168000	168	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> </ul>
112500	180000	180	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, inspect the transfer case fluid.</li> <li>■ Adjust parking brake on vehicles equipped with four-</li> </ul>

			wheel disc brakes.
120000	192000	192	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Change the automatic transmission fluid and filter(s).</li> <li>■ Change the Transfer Case Fluid.</li> <li>■ Replace the accessory drive belt(s).</li> <li>■ Inspect the CV joints.</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.</li> </ul>
127500	204000	204	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
135000	216000	216	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>
142500	228000	228	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>
150000	240000	240	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Check the transfer case fluid or change if using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing</li> <li>■ If using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing, change the front and rear axle fluid.</li> <li>■ Flush and replace the engine coolant at 240 months or 150,000 miles (240,000 km) whichever comes first.</li> </ul>

† This maintenance is recommended by the manufacturer to the owner, but is not required to maintain emissions warranty.

**WARNING:**

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component

**malfunction and effect vehicle handling and performance. This could cause an accident**

**Failure to follow these instructions may result in possible serious or fatal injury.**