

# 2011 WK MAINTENANCE SCHEDULES - MID EAST

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles "Oil Change Required" will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

The oil change indicator message will illuminate approximately 7,000 miles (11 200 km) after the most recent oil change was performed. Have your vehicle serviced as soon as possible, within 500 miles (800 km).

- NOTE:**
- **The oil change indicator message will not monitor the time since the last oil change. Change your vehicles oil if it has been 6 months since your last oil change even if the oil change indicator message is NOT illuminated.**
  - **Change your engine oil more often if you drive your vehicle off-road for an extended period of time.**
  - **Under no circumstances should oil change intervals exceed 7,500 miles (12 000 km) or 6 months, whichever comes first.**

## OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The "Oil Change Required" message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the "ON" position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the "LOCK" position.

**NOTE:** If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.

## At Each Stop for Fuel

- Check the engine oil level about 5 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

## Once a Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and transmission (4.7L and 5.7L only) and add as needed.
- Check all lights and other electrical items for correct operation.

## At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

### CAUTION:

- Failure to perform the required maintenance items may result in damage to the vehicle.
- Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.

## Required Maintenance Intervals

### Severe Duty Conditions

†† Change the engine oil and engine oil filter at every 3,000 miles (5 000 km) or 3 months if using your vehicle under any of the following severe duty conditions:

- Stop and go driving.
- Driving in dusty conditions.
- Short trips of less than 10 miles (16 km).
- Trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.

| Perform Maintenance Every   |            |        | Maintenance Items   |
|---|------------|--------|---|
| (Where time and mileage are listed, follow the interval that occurs first.) |            |        |   |
| Miles   | Kilometers | Months |   |
| 7500  | 12000      | 6      | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>   |
| 15000   | 24000      | 12     | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul> |
| 22500   | 36000      | 18     | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>  |

|       |        |    |  |
|-------|--------|----|--|
| 30000 | 48000  | 24 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the transfer case fluid.</li> </ul>  |
| 37500 | 60000  | 30 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>  |
| 45000 | 72000  | 36 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>  |
| 52500 | 84000  | 42 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>  |
| 60000 | 96000  | 48 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Change the automatic transmission fluid and filter(s) if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</li> <li>■ Change the transfer case fluid if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</li> </ul> |
| 67500 | 108000 | 54 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>   |
|       |        |    |  |

|        |        |    |   |
|--------|--------|----|---|
| 75000  | 120000 | 60 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Flush and replace the engine coolant if not done at 105,000 miles (168 000 km).</li> </ul>   |
| 82500  | 132000 | 66 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>   |
| 90000  | 144000 | 72 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (3.6L and 5.7L Engine).</b></li> <li>■ <b>Inspect and replace PCV valve if necessary. †</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> <li>■ Inspect the transfer case fluid.</li> </ul> |
| 97500  | 156000 | 78 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>   |
| 105000 | 168000 | 84 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Flush and replace the engine coolant if not done at 60 months.</li> </ul>  |
| 112500 | 180000 | 90 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul>  |
| 120000 | 192000 | 96 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>   |

|        |        |     |   |
|--------|--------|-----|---|
|        |        |     | <ul style="list-style-type: none"> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Change the automatic transmission fluid and filter(s).</li> <li>■ Change the transfer case fluid.</li> <li>■ Replace the accessory drive belt(s).</li> </ul>   |
| 127500 | 204000 | 102 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>   |
| 135000 | 216000 | 108 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the air conditioning filter.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.</li> </ul> |
| 142500 | 228000 | 114 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> </ul>   |
| 150000 | 240000 | 120 | <ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.††</li> <li>■ Rotate tires.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Replace the air conditioning filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Inspect the transfer case fluid.</li> </ul>   |

† This maintenance is recommended by the manufacturer to the owner, but is not required to maintain emissions warranty.

**WARNING:**

- **You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.**
- **Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident**

**Failure to follow these instructions may result in possible serious or fatal injury.**