

## 2013-2014 WK - Vehicle Quick Reference/Maintenance Schedules/Description

# MAINTENANCE SCHEDULES - NAFTA - SRT8

The Scheduled Maintenance services listed in this manual must be done at the times or mileages specified to protect your vehicle warranty and ensure the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions, such as dusty areas and very short trip driving. Inspection and service should also be done anytime a malfunction is suspected.

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles "Oil Change Required" will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

Based on engine operation conditions the oil change indicator message will illuminate, this means that service is required for your vehicle. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

- NOTE:**
- **The oil change indicator message will not monitor the time since the last oil change. Change your vehicle's oil if it has been 6 months since your last oil change even if the oil change indicator message is NOT illuminated.**
  - **Change your engine oil more often if you drive your vehicle off-road for an extended period of time.**
  - **Under no circumstances should oil change intervals exceed 6,000 miles (10,000 km) or 6 months, whichever comes first.**

### At Each Stop For Fuel

- Check the engine oil level about five minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

### Once A Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, and power steering and add as needed.
- Check all lights and other electrical items for correct operation.

### At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

- CAUTION:**
- **Failure to perform the required maintenance items may result in damage to the vehicle.**
  - **Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.**

## OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The “Oil Change Required” message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the “ON” position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the “LOCK” position.

**NOTE:** If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.

## Required Maintenance Intervals

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
6000	10000	6	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> </ul>
12000	20000	12	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints. Perform the first inspection at 12,000 miles (20 000 km) or 12 months.</li> <li>■ Inspect exhaust system. Perform the first inspection at 12,000 miles (20 000 km) or 12 months.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
18000	30000	18	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> </ul>
24000	40000	24	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if</li> </ul>

			<p>necessary.</p> <ul style="list-style-type: none"> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> <li>■ Inspect front and rear axle fluid, change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
30000	50000	30	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Drain the transfer case and refill.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> </ul>
36000	60000	36	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
42000	70000	42	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Inspect front and rear axle fluid, or change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
48000	80000	48	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
54000	90000	54	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> </ul>
60000	100000	60	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Drain the transfer case and refill.</li> <li>■ Inspect the accessory drive belt(s), replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper</li> </ul>

			<p>looseness or end play; replace if necessary.</p> <ul style="list-style-type: none"> <li>■ Inspect front and rear axle fluid, or change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
66000	110000	66	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> </ul>
72000	120000	72	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
78000	130000	78	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Inspect front and rear axle fluid, or change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
84000	140000	84	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
90000	150000	90	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Inspect and replace PCV valve if necessary.</li> <li>■ Drain the transfer case and refill.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> </ul>
96000	160000	96	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Replace the spark plugs. ** The spark plug change interval is mileage based only, monthly intervals do not apply.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
102000	170000	102	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> </ul>

			<ul style="list-style-type: none"> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Inspect front and rear axle fluid, or change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
108000	180000	108	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
114000	190000	114	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> </ul>
120000	200000	120	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Flush and replace the engine coolant at 120 months or 150,000 miles (250 000 km) whichever comes first</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> <li>■ Drain the transfer case and refill.</li> <li>■ Inspect front and rear axle fluid, or change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
126000	210000	126	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> </ul>
132000	220000	132	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
138000	230000	138	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Inspect front and rear axle fluid, or change if using your vehicle for the following: police, taxi, fleet, sustained high speed driving, off-road, or frequent trailer towing.</li> </ul>
144000	240000	144	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if</li> </ul>

			<p>necessary.</p> <ul style="list-style-type: none"> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
150000	250000	150	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate tires, rotate at the first sign of irregular wear.</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Drain the transfer case and refill.</li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Flush and replace the engine coolant at 120 months or 150,000 miles (250 000 km) whichever comes first</li> </ul>

**WARNING:**

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident

**Failure to follow these instructions may result in possible serious or fatal injury.**