


JEEP GRAND CHEROKEE (WK)

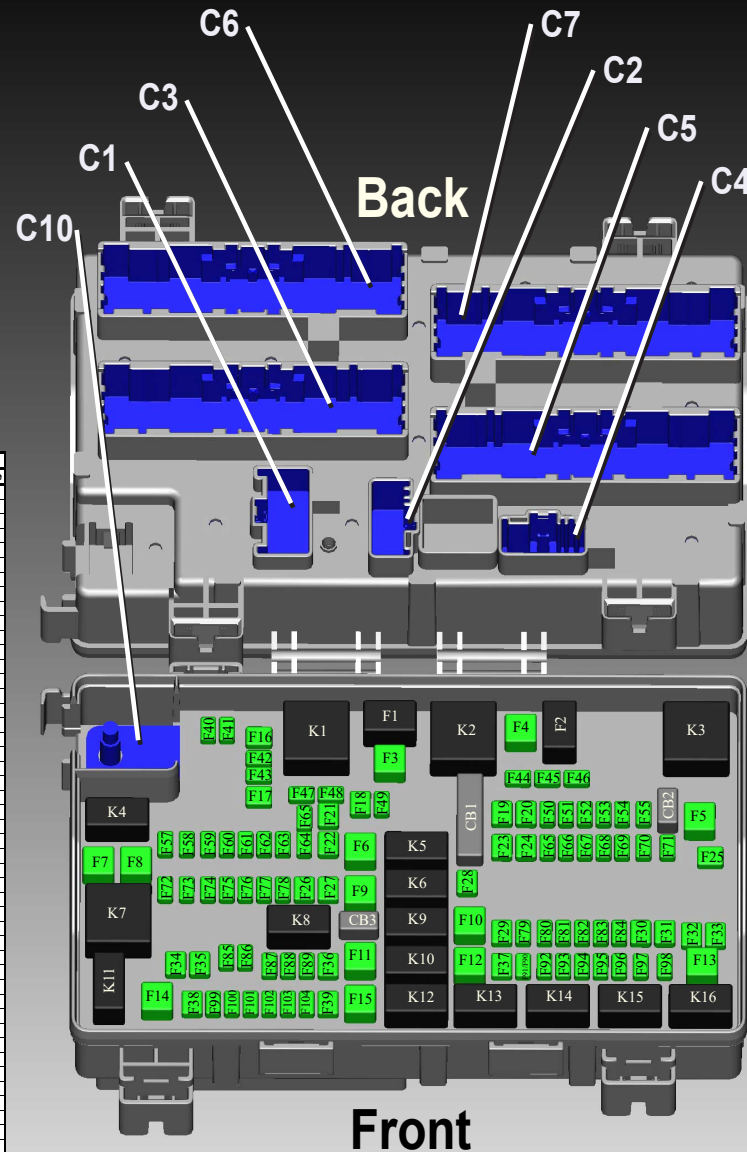

| FUSES | | | |
|-------|-----------|--|----------|
| Fuse | Alternate | Description | Amperage |
| F03 | F0003U | RAD FAN | 60A |
| F05 | F0005U | COMPRESSOR FOR AIR SUSPENSION - IF EQUIPPED | 40A |
| F06 | F0006U | ANTILOCK BRAKES / ELECTRONIC STABILITY CONTROL PUMP | 40A |
| F07 | F0007U | STARTER SOLENOID | 30A |
| F09 | F0009U | DIESEL FUEL HEATER (DIESEL ENGINE ONLY) / BRAKE VACUUM PUMP | 30A |
| F10 | F0010U | BODY CONTROLLER / EXTERIOR LIGHTING #2 | 40A |
| F11 | F0011U | INTEGRATED TRAILER BRAKE MODULE - IF EQUIPPED | 30A |
| F12 | F0012U | BODY CONTROLLER #3 / INTERIOR LIGHTS | 40A |
| F13 | F0013U | BLOWER MOTOR FRONT | 40A |
| F14 | F0014U | BODY CONTROLLER #4 / POWER LOCKS | 40A |
| F15 | F0015U | LTR ENGINE COOLING PUMP | 40A |
| F17 | F0017U | HEADREST WASHER - IF EQUIPPED | 30A |
| F20 | F0020U | PASSENGER DOOR MODULE | 30A |
| F22 | F0022U | ENGINE CONTROL MODULE | 20A |
| F23 | F0023U | INTERIOR LIGHTS #1 | 30A |
| F24 | F0024U | DRIVER DOOR MODULE | 30A |
| F25 | F0025U | FRONT WIPERS | 30A |
| F26 | F0026U | ANTILOCK BRAKES / STABILITY CONTROL MODULE / VALVES | 30A |
| F28 | F0028U | TRAILER TOW BACKUP LIGHTS - IF EQUIPPED | 20A |
| F29 | F0029U | TRAILER TOW PARKING LIGHTS - IF EQUIPPED | 20A |
| F30 | F0030U | TRAILER TOW RECEPTACLE - IF EQUIPPED | 30A |
| F32 | F0032U | DRIVE TRAIN CONTROL MODULE - IF EQUIPPED | 30A |
| F34 | F0034U | SLIP DIFFERENTIAL CONTROL | 30A |
| F35 | F0035U | SUNROOF - IF EQUIPPED | 30A |
| F36 | F0036U | REAR DEFROSTER | 30A |
| F38 | F0038U | POWER INVERTER 115V AC - IF EQUIPPED | 30A |
| F39 | F0039U | POWER LIFTGATE - IF EQUIPPED | 30A |
| F40 | F0040U | DAYTIME RUNNING LIGHTS | 10A |
| F42 | F0042U | HORN | 20A |
| F44 | F0044U | DIAGNOSTIC PORT | 10A |
| F45 | F0045U | CYBER SECURITY GATEWAY | 5A |
| F49 | F0049U | INTEGRATED CENTER STACK / CLIMATE CONTROL | 10A |
| F50 | F0050U | AIR SUSPENSION CONTROL MODULE / ELDS | 20A |
| F51 | F0051U | IGNITION NODE MODULE / KEYLESS IGNITION / STEERING COLUMN LOCK | 15A |
| F53 | F0053U | TRAILER TOW - LEFT TURN/STOP LIGHTS - IF EQUIPPED | 20A |
| F56 | F0056U | ADDITIONAL CONTENT (DIESEL ENGINE ONLY) | 15A |
| F57 | F0057U | NOX SENSOR | 20A |
| F58 | F0058U | HID HEADLAMPS LEFT | 15A |
| F59 | F0059U | SCR PUMPS RELAY FEED | 10A |
| F60 | F0060U | TRANSMISSION CONTROL MODULE | 15A |
| F61 | F0061U | TRANSMISSION CONTROL MODULE / PM SENSOR (DIESEL ENGINE ONLY) | 10A |
| F62 | F0062U | AIR CONDITIONING CLUTCH | 10A |
| F63 | F0063U | IGNITION COILS (GAS), UREA HEATER (DIESEL) | 20A |
| F64 | F0064U | FUEL INJECTORS / POWERTRAIN | 25A |
| F66 | F0066U | SUNROOF / PASSENGER WINDOW SWITCHES / RAIN SENSOR | 10A |
| F67 | F0067U | CD / DVD / BLUETOOTH HANDS-FREE MODULE - IF EQUIPPED | 15A |
| F68 | F0068U | REAR WIPER MOTOR | 20A |
| F69 | F0069U | SPOTLIGHT FEED - IF EQUIPPED | 15A |
| F70 | F0070U | FUEL PUMP MOTOR | 20A |
| F71 | F0071U | AUDIO AMPLIFIER | 30A |
| F72 | F0072U | PCM | 10A |
| F73 | F0073U | HID HEADLAMPS RIGHT | 15A |
| F75 | F0075U | DUAL BATTERY CONTROL | 10A |
| F76 | F0076U | ANTILOCK BRAKES / ELECTRONIC STABILITY CONTROL | 10A |
| F77 | F0077U | DRIVETRAIN CONTROL MODULE / FRONT AXLE DISCONNECT MODULE | 10A |
| F78 | F0078U | ENGINE CONTROL MODULE / ELECTRIC POWER STEERING - IF EQUIPPED | 10A |
| F80 | F0080U | UNIVERSAL GARAGE DOOR OPENER / ANTI-INTRUSION MODULE | 10A |
| F81 | F0081U | TRAILER TOW RIGHT TURN / STOP LIGHTS | 20A |
| F82 | F0082U | STEERING COLUMN CONTROL MODULE / CRUISE CONTROL | 10A |
| F83 | F0083U | FUEL DOOR | 15A |
| F84 | F0084U | CLUSTER | 15A |
| F85 | F0085U | AIRBAG MODULE | 10A |

| FUSES | | | |
|---------|-----------|--|----------|
| Fuse | Alternate | Description | Amperage |
| F86 | F0086U | AIRBAG MODULE | 10A |
| F87 | F0087U | AIR SUSPENSION MODULE | 10A |
| F88 | F0088U | CLUSTER / SGW MODULE | 15A |
| F90/F91 | F0091U | POWER OUTLET (REAR SEATS) CUSTOMER SELECTABLE | 20A |
| F93 | F0093U | CIGAR LIGHTER | 20A |
| F94 | F0094U | SHIFTER / TRANSFER CASE MODULE | 10A |
| F95 | F0095U | REAR CAMERA / PARK ASSIST | 10A |
| F96 | F0096U | REAR SEAT HEATER SWITCH / FLASHLAMP CHARGE - IF EQUIPPED | 10A |
| F97 | F0097U | REAR HEATED SEATS & HEATED STEERING WHEEL - IF EQUIPPED | 20A |
| F98 | F0098U | FRONT HEATED SEATS / VENT SEATS | 20A |
| F99 | F0099U | CLIMATE CONTROL / DRIVER ASSISTANCE MODULE | 10A |
| F100 | F0100U | ACTIVE DAMPING - IF EQUIPPED | 10A |
| F101 | F0101U | ELECTROCHROMATIC MIRROR / SMART HIGH BEAMS - IF EQUIPPED | 15A |
| F103 | F0103U | CABIN HEATER (DIESEL ENGINE ONLY) | 10A |
| F104 | F0104U | POWER OUTLETS (INSTRUMENT PANEL / CENTER CONSOLE) | 20A |

| RELAYS | | | |
|--------|-----------|--------------------|----------|
| Relay | Alternate | Description | Amperage |
| K1 | R0813 | RAD FAN LOW | N/A |
| K2 | D838 | RAD FAN HIGH SPEED | N/A |
| K3 | R66301 | AIR SUSPENSION | N/A |
| K4 | R0136F | PZEV AIR PUMP | N/A |
| K5 | D820 | ASD | N/A |
| K6 | D851A | IGNITION RUN ACC 1 | N/A |
| K7 | D87902 | STARTER SOLENOID 2 | N/A |
| K8 | D893 | RUN START | N/A |
| K9 | D2759 | VACUUM PUMP | N/A |
| K10 | D821 | EBL | N/A |
| K11 | D87901 | STARTER SOLENOID | N/A |
| K12 | D842B | IGNITION RUN 2 | N/A |
| K14 | D851B | IGNITION RUN ACC 2 | N/A |
| K15 | D842A | IGNITION RUN 1 | N/A |
| K16 | D876 | HVAC BLOWER | N/A |

| CIRCUIT BREAKERS | | | |
|------------------|-----------|----------------------|----------|
| CB | Alternate | Description | Amperage |
| CB1 | CB001 | POWER WINDOW | 25A |
| CB2 | CB002 | POWER SEAT DRIVER | 25A |
| CB3 | CB003 | POWER SEAT PASSENGER | 25A |

Underhood Power Distribution Center (PDC)