

1. Partially remove the door trim panel as necessary to gain access to the mirror.

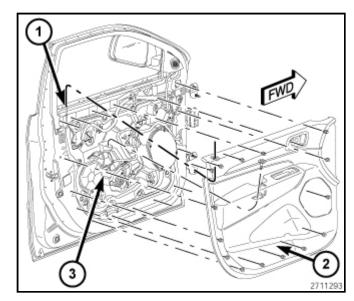


- 2. Disconnect the wire harness connectors (2) from the mirror.
- 3. Remove the three nuts (1) that secure the mirror to the door and carefully remove the mirror.

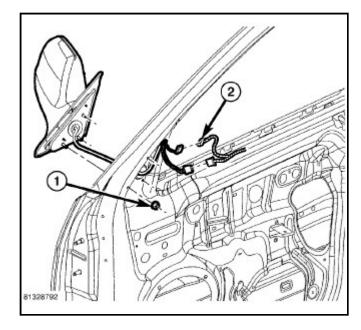

WARNING: Always wear eye and hand protection when servicing the mirror glass. Failure to observe these warnings may result in personal injury from broken glass.

- 1. Position the mirror glass (1) so that it is facing in toward the vehicle as far as possible.
- 2. Disconnect and isolate the negative battery cable.

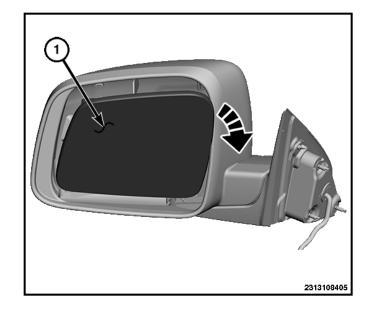

- 3. Place thumbs behind mirror glass (1) and push out from the mirror assembly. This will release the mirror glass case's snap attachment feature.
- 4. Release the clips and separate the mirror glass from the motor. If equipped, disconnect the wire harness electrical connectors (2).

