


1. Release the air cleaner housing cover latches (1).

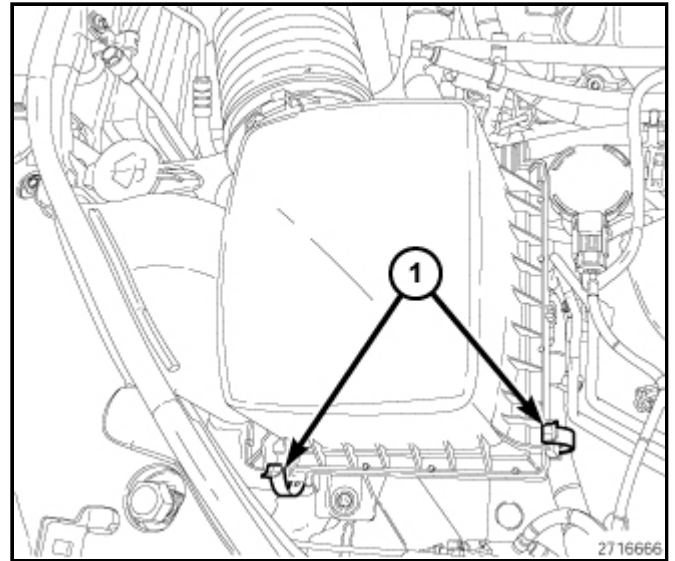


2. Lift the cover (1) and release the cover to housing alignment tabs (2).

3. Remove the air cleaner element (3).


**CAUTION:** Do not use compressed air to clean out the air cleaner housing without first covering the air inlet to the throttle body. Dirt or foreign objects could enter the intake manifold causing engine damage.

4. Remove any dirt or debris from the bottom of the air cleaner housing.

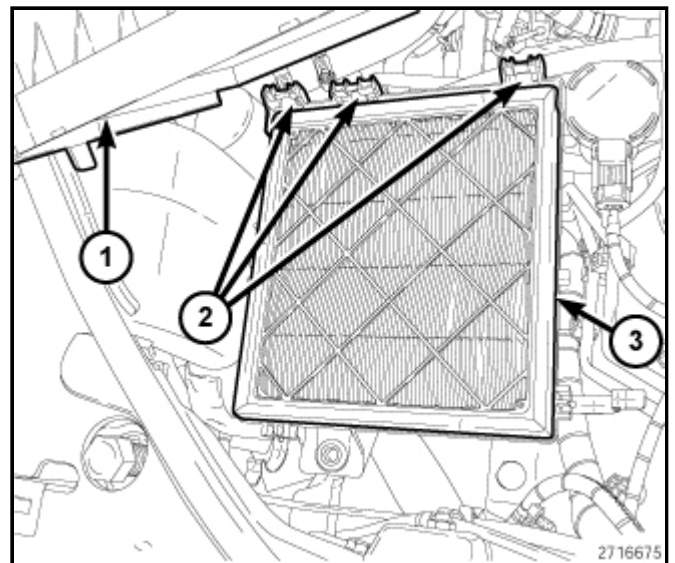


## 2020 Grand Cherokee - 3.6L - BODY, Air Cleaner / Removal

1. Disconnect and isolate the negative battery cable.
2. Remove the engine cover.
3. Disconnect the electrical connector from the Inlet Air Temperature (IAT) sensor (1).

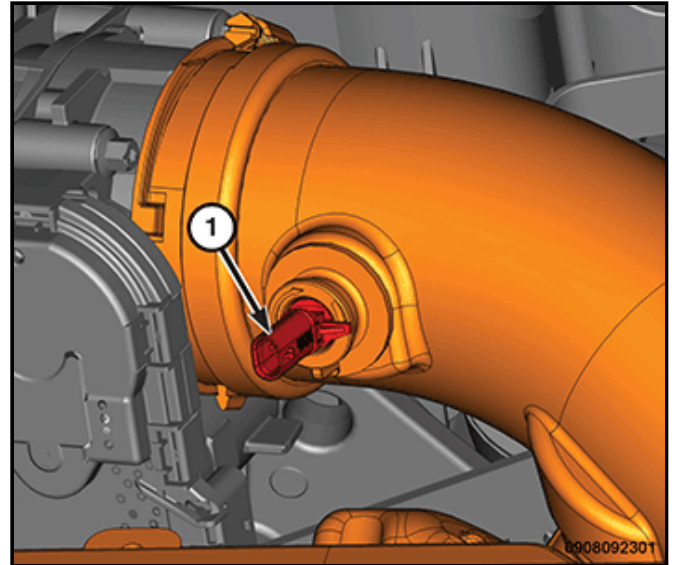

4. Loosen the clamp (1) at the throttle body.
5. Loosen the clamp (2) at the air cleaner body.
6. Disengage the air cleaner assembly from the rubber grommets (2).
7. Remove the resonator.

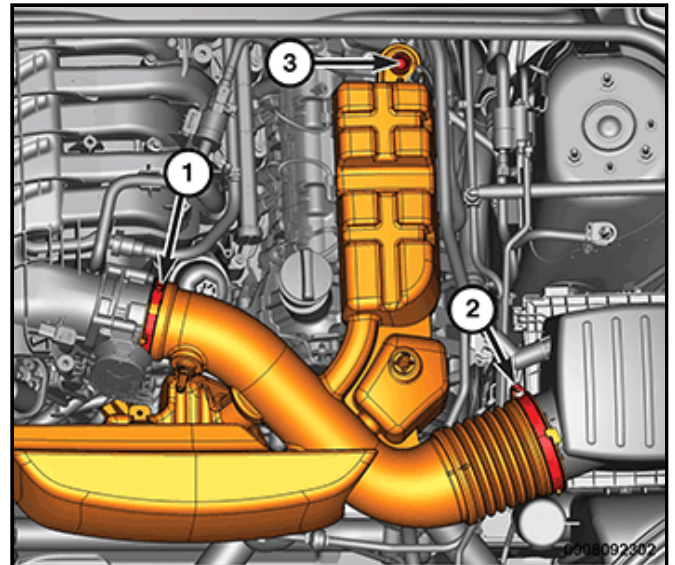

8. Disconnect the fresh air makeup hose (4) from the air cleaner body.
9. Disengage the hose retainer (5) from the air cleaner body.
10. Remove the push pin (3).
11. Reposition the hood seal (2) and pull the air cleaner body (1) straight up off of the locating pins.

