



REMOVAL


1. Remove the plastic rivets (3) that secure the fender flares (1) to the rear fascia.
2. Release the clips (2) and remove both rear fender flares.

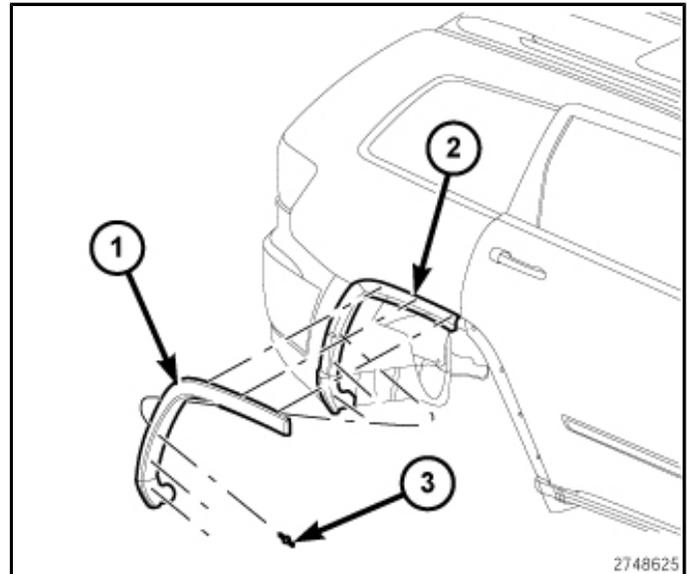

3. Open the rear liftgate (1).
4. Remove the two lower retainers (4) at the rear support beam.
5. Remove the fasteners (5) at the back sides of the quarter panels, in the liftgate opening.
6. Remove the fasteners (3) on both sides at the wheel well openings.

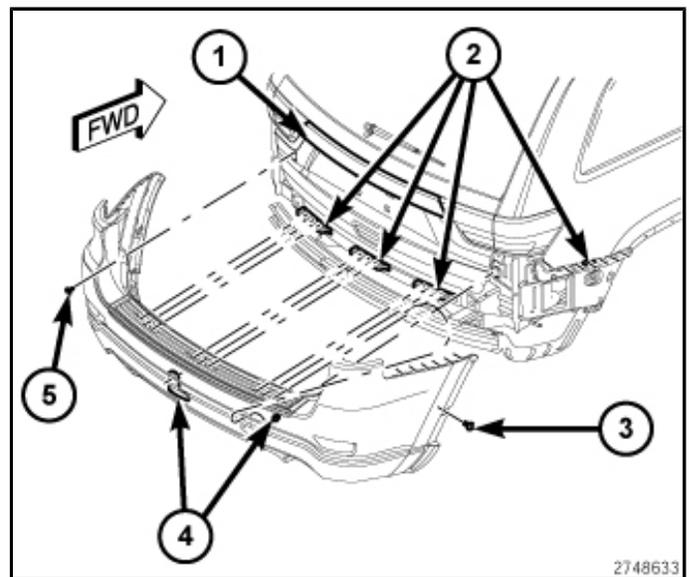


7. Release the integral latch features (2) at the sides and along the back and separate the fascia from the vehicle.
8. Disconnect the body harness electrical connector (3) and remove the fascia.
9. Remove both the park assist (5) and blind spot sensors (2), if equipped.
10. Remove the sensor electrical harness.

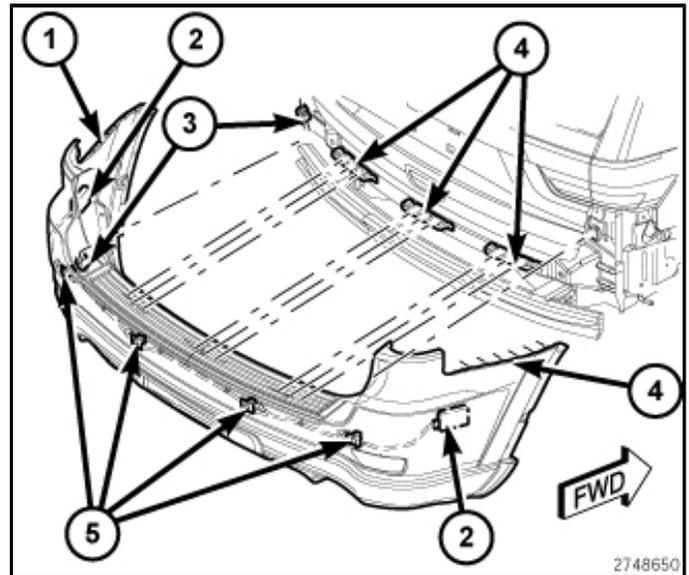


REMOVAL – SRT8


1. Remove the rear push pin fasteners (2) from the rear belly pan (1) to the fascia.

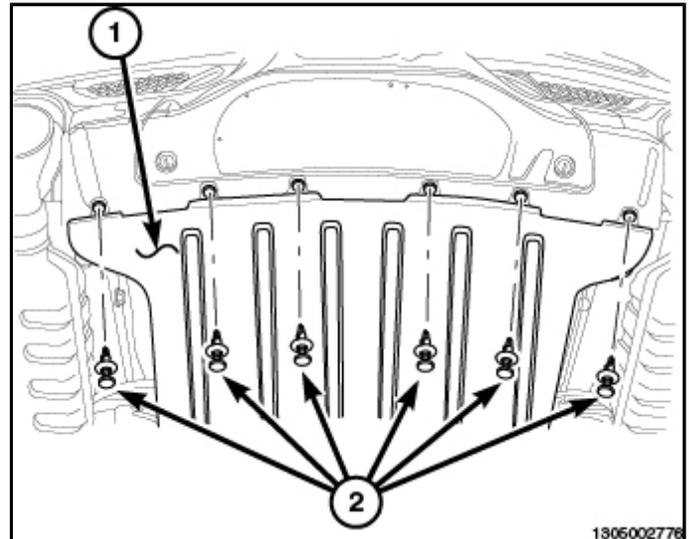


2. Remove the front push pin fasteners (2) and remove the rear belly pan (1).

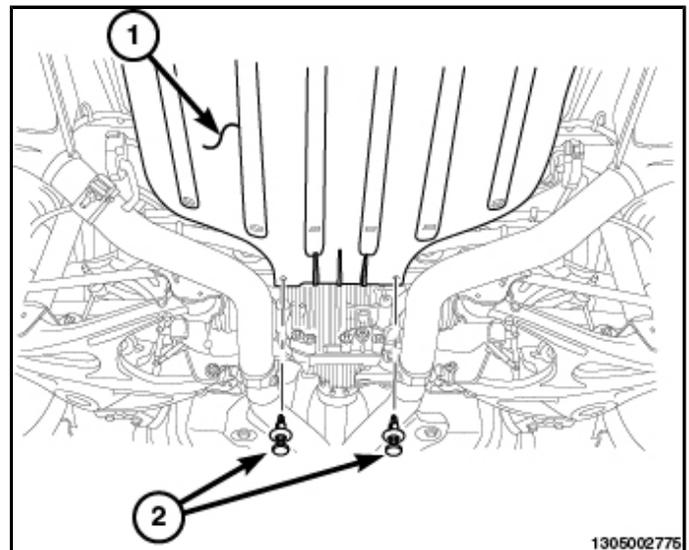


3. Remove the plastic rivets (1) that secure the wheel liners to the rear fascia.

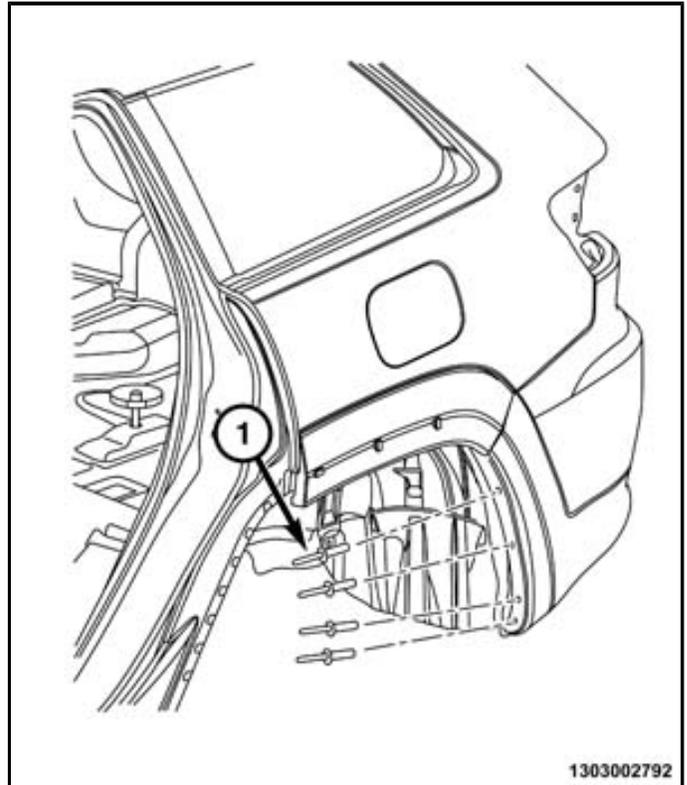

4. Open the rear liftgate (1).
5. Remove the fasteners (5) at the back sides of the quarter panels, in the liftgate opening.
6. Release the clips (2) and remove both rear fender flares.
7. Remove the two lower retainers (4) at the rear support beam.
8. Remove the fasteners (3) on both sides at the wheel well openings.

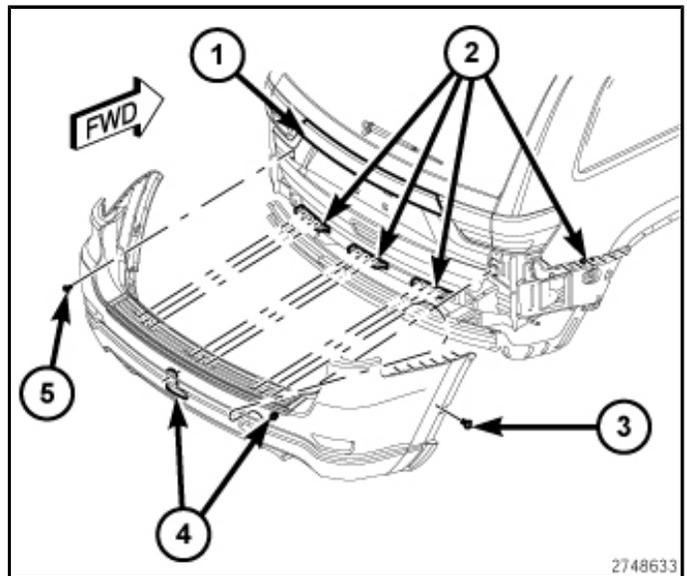


9. Release the integral latch features (2) at the sides and along the back and separate the fascia from the vehicle.
10. Disconnect the body harness electrical connector (3) and remove the fascia.
11. Remove both the park assist (5) and blind spot sensors (2), if equipped.
12. Remove the sensor electrical harness.

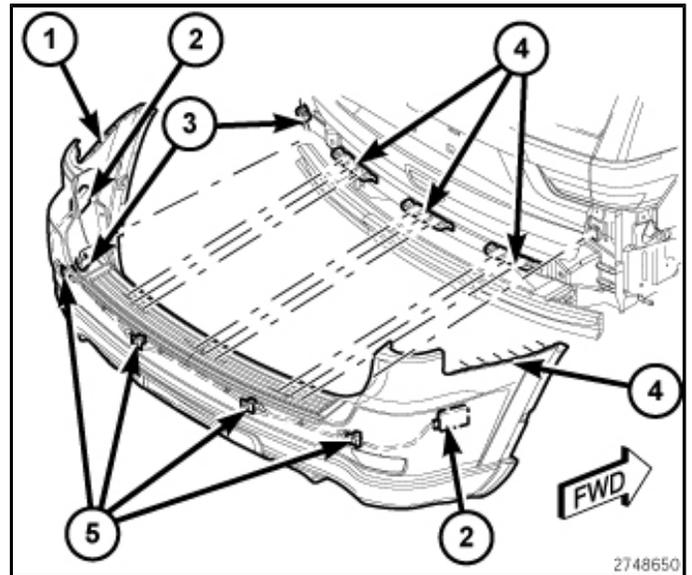


INSTALLATION


1. Install the park assist and blind spot sensors (5 and 2), if equipped.
2. Install the sensor electrical harness, if equipped.
3. Position the fascia onto the vehicle and connect the body harness electrical connector (3), if equipped.

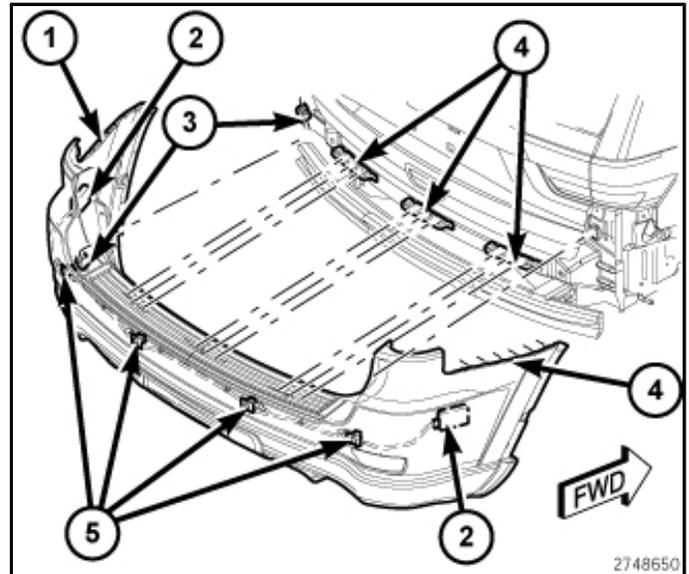

4. Slightly spread the sides of the fascia to clear the painted surfaces.
5. position the fascia and then press into place at the sides and along the liftgate opening to engage the integral latches (2).
6. Install the two lower retainers (4) at the rear support beam.
7. Install the fasteners (5) at the liftgate opening.
8. Install the fasteners (3) on both sides at the wheel well openings

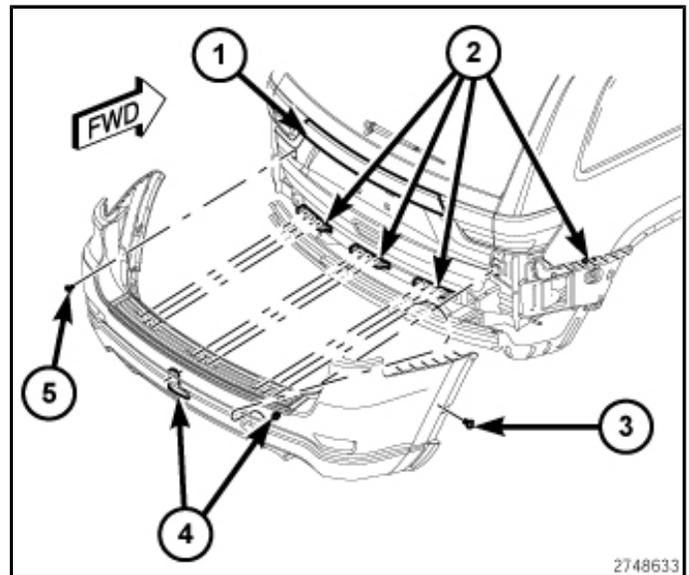


9. Position the fender flares and press firmly and evenly to engage the clips (2) and install both fender flares.
10. Install new rivets (1) at the wheel wells to secure the fender flares (1) to the rear fascia.

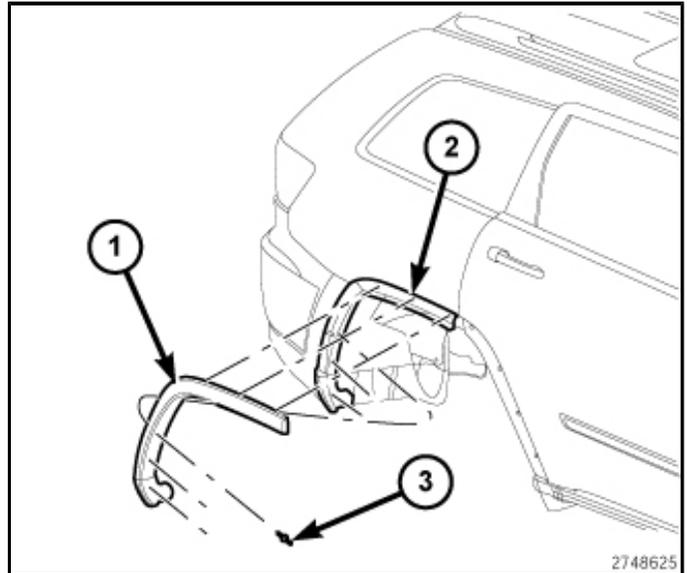


INSTALLATION – SRT8


1. Install the park assist and blind spot sensors (5 and 2), if equipped.
2. Install the sensor electrical harness, if equipped.
3. Position the fascia onto the vehicle and connect the body harness electrical connector (3), if equipped.

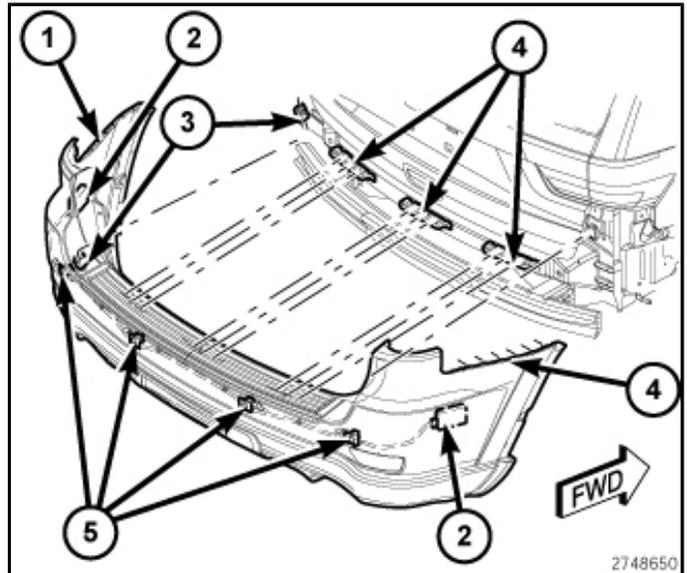


4. Slightly spread the sides of the fascia to clear the painted surfaces.
5. position the fascia and then press into place at the sides and along the liftgate opening to engage the integral latches (2).
6. Install the two lower retainers (4) at the rear support beam.
7. Install the fasteners (5) at the liftgate opening.
8. Install the fasteners (3) on both sides at the wheel well openings.

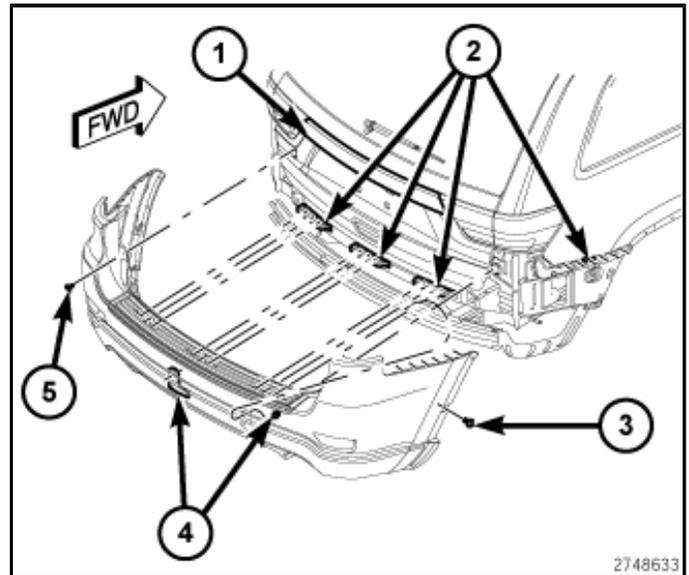

9. Install new rivets (1) at the wheel wells to secure the wheel liners to the rear fascia.

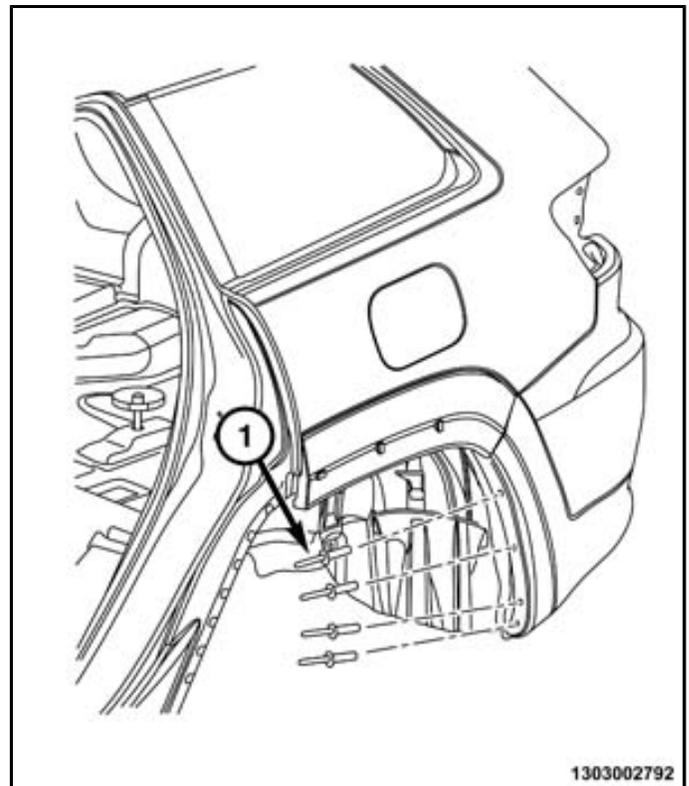

10. Install the rear belly pan (1) and install the front push pin fasteners (2).

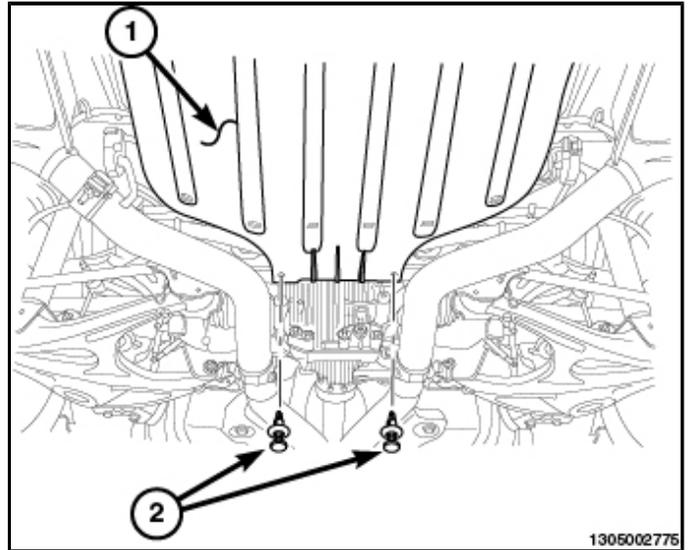

11. Install the rear push pin fasteners (2) securing the rear belly pan (1) to the fascia.

